BUTTON DESCRIPTION FOR LIVE VIEW VIDEO

BUTTON		DESCRIPTION
1	START	Manage/ Activate PTZ Tour
2	STOP	Deactivate PTZ Tour
3	LEARN	Select camera (move left)
4	DETECT	Select camera (move right)
5	INFO	Open Archive
6	1-9	Number of preset
7	0	Home
8	F1	Select saved screen
9	F2	Maximise selected camera
10	F4	Save current frame
	JOG SHUTTLE	Select camera
	JOYSTICK	PTZ control

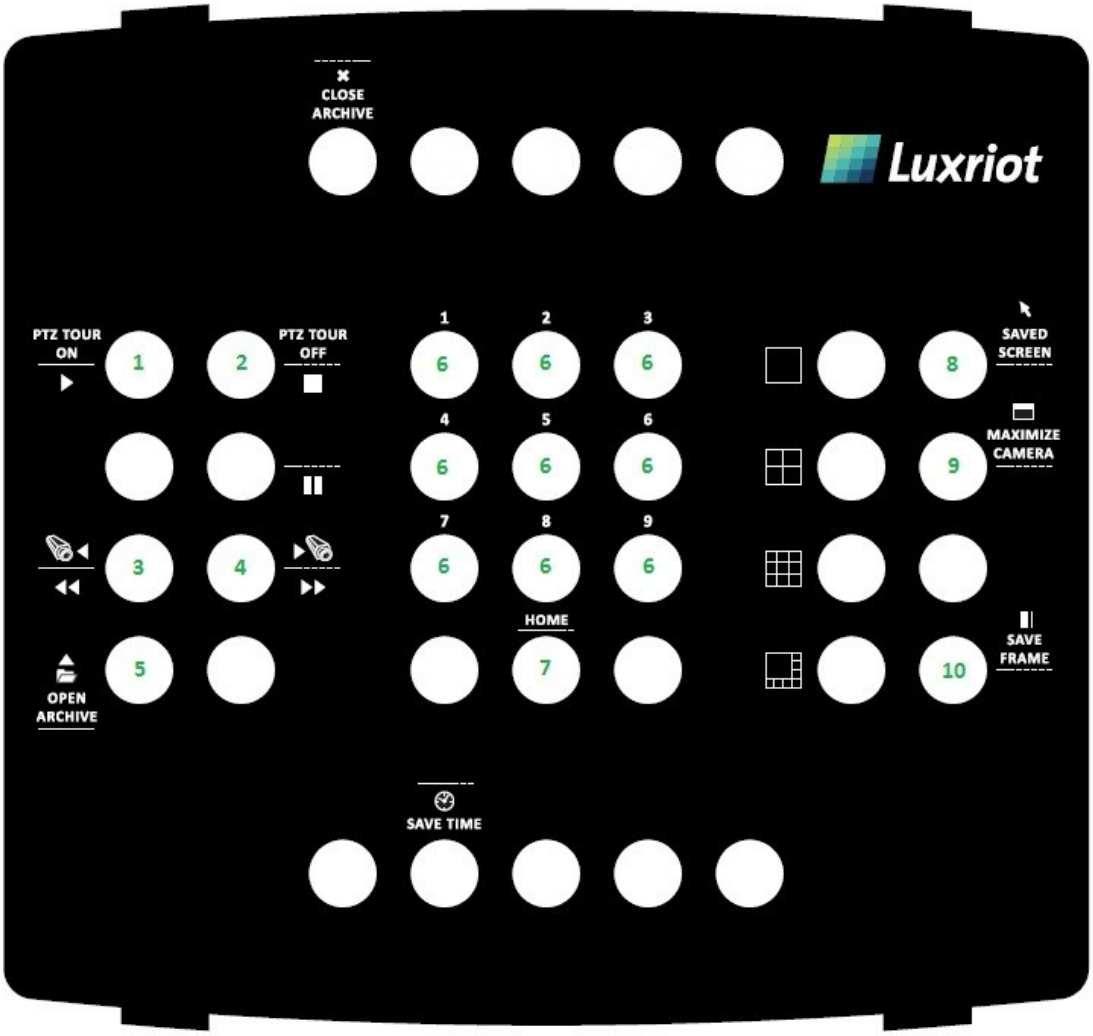

BUTTON DESCRIPTION FOR ARCHIVE
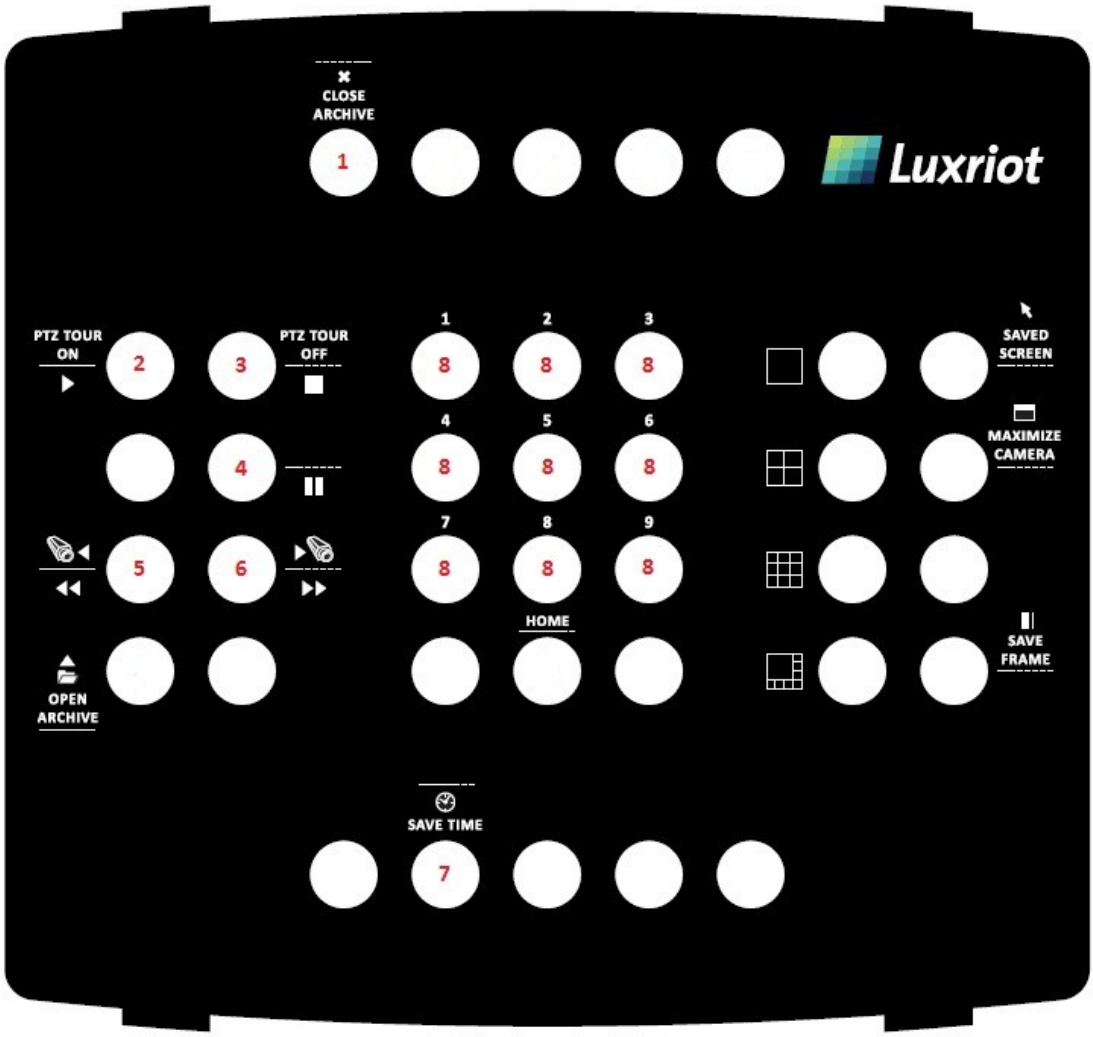
BUTTON		DESCRIPTION
1	ESC	Close archive
2	START	Play archive video
3	STOP	Stop archive video
4	PAUSE	Pause archive video
5	LEARN	Seek backward
6	DETECT	Seek forward
7	SET (1..9)	Save current time
8	1-9	Shortcut to saved time
	JOG SHUTTLE	Move to next frame/ Playback speed